

# QUICK START GUIDE Automate™ Control4

## INTEGRATION SUPPORT



#### **AUTOMATE PULSE PRO OVERVIEW**

Elevate your Automate experience by seamlessly integrating Automate motorized shades with CONTROL4 Smart Home systems. The Automate Pulse PRO Hub offers a powerful integration with discrete shade control and two-way communication, providing real-time updates on shade position and battery levels. Featuring both Ethernet (CAT 5) and 2.4GHz wireless connectivity, the Pulse PRO Hub ensures smooth home automation integration through an easy-to-access RJ45 port located on the back of the hub. Each hub supports up to 30 shades, making it a versatile solution for any home automation setup.

#### **OVERVIEW:**

· · - · · · · · · · · · · · · · · · · ·	
Control4 Version Required	2.9.0 minimum
Developer	annex4
Initial Release Date	5/28/2019
Last Modified Date	1/24/2025
Support Email	ustechsupport@rolleaseacmeda.com

Note: For support of real time updates the annex4 Link driver is required. You can find the driver at: https://annex4.link/drivers/link


#### HARDWARE INSTALLATION:


- Install all shades/blinds/motors at desired locations
- Connect the Hub to the Automate Pulse app
- Connect all shades/blinds/motors to the Automate Pulse app

#### **DRIVE INSTALLATION:**

- 1. Place the "Automate Pulse PRO Hub" driver into the project.
- 2. Navigate to the Connections section and select the Network tab.
- 3. Enter the IP address of the Automate Pulse PRO Hub.
- 4. Confirm that shades have been detected by looking at the Detected Drivers property.
- 5. For each shade that the "Automate Pulse Hub" has added to the connections add an "Automate Pulse Shade" driver to the project.
- 6. Bind the "Automate Pulse Shade" drivers to the "Automate Pulse Hub".
  - a) Once the connection has been bound the driver will automatically populate shade properties.
- 7. Set the 'Shade Movement Type' to 'Move' or 'Rotate' to determine what the driver should control.
  - a) 'Move' will control basic shade movement.
  - b) 'Rotate' will control the motor rotation.
- 8. Run the 'Calibrate' action on the shade, this will prepare the driver to calculate the travel times of the shades. By doing this the driver will accurately display ramp rates for a better user experience.
- 9. Refresh Navigators.


**NOTE**: Grayed out sections are part of the hub driver installation.

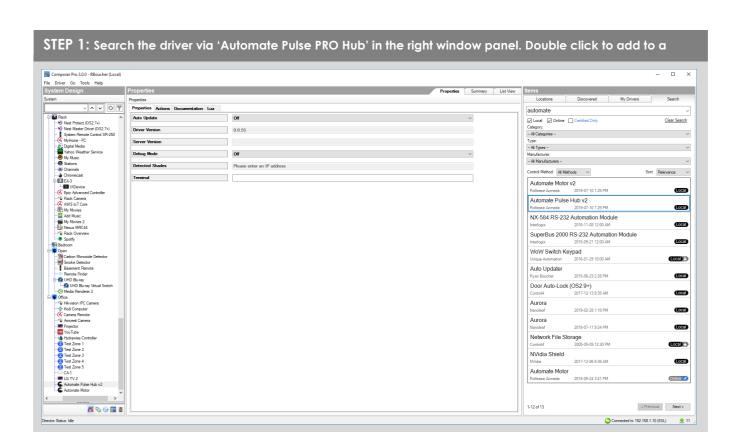

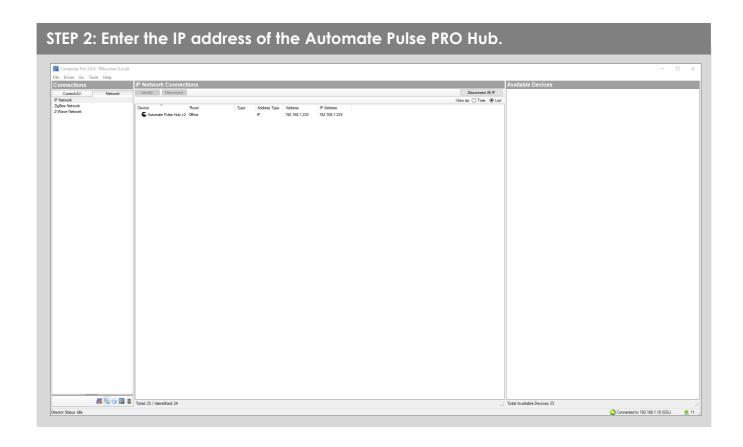




#### STEP 3: The properties of the driver and discovered shade (5WE). Composer Pro 3.0.0 - RBoucher (Local) File Driver Go Tools Help System Design automate Auto Update Driver Version 0.0.55 Category: - All Categories --Server Version Debug Mode Off - All Manufacturers -Detected Shades EPF Control Method: All Methods v Sort Relevance v Automate Motor v2 | Rollease Acmeda | Z019-07-10 1.25 PM | Rollease Acmeda NX-584 RS-232 Automation Module Local SuperBus 2000 RS-232 Automation Module Local WoW Switch Keypad Unique Automation 2016-01-29 10:00 AM Auto Updater Ryan Boucher 2015-06-23 2:28 PM Door Auto-Lock (OS2.9+) Control4 2017-12-13 9:35 AM Local Aurora Network File Storage Network File Storage 2005-05-09 12:30 PM Local (2) NVidia Shield Automate Motor Rollease Acmeda 2018-05-24 3:41 PM **⊠** ⊗ ⊕ **■ 3**

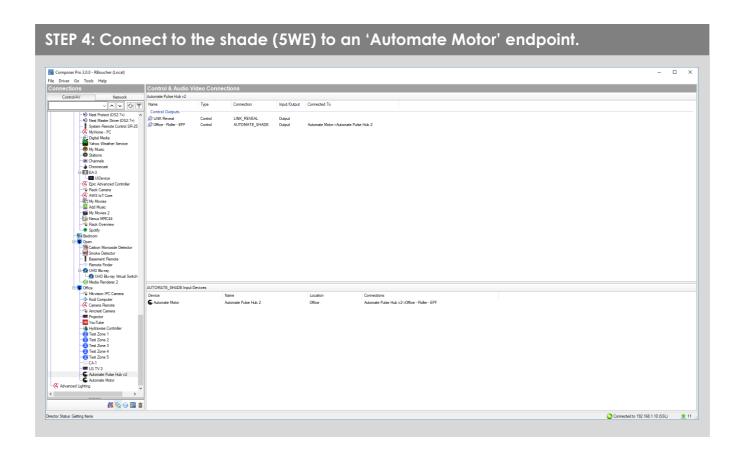



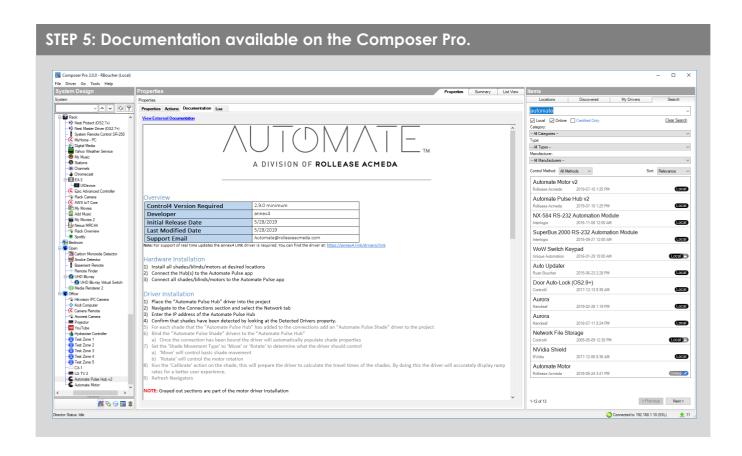

This driver is an Interface Controller for the Rollease Acmeda Automate Pulse PRO Hub. It allows IP control over Rollease shades from CONTROL4.

### **DRIVE FOR THE MOTOR:**

#### **SUPPORTED FEATURES:**

- Drag and drop installation
- Easy calibration of shade travel time
- Control of motor rotation and shade movement

#### **PROPERTIES:**

Property	Description	
Auto Update	Enables or disables real time updates of the driver from annex4	
	For support of this p	For support of this property the annex4 Link driver is required
Driver Version	The current version of the driver	
Server Version	The server version of the driver	
00170170131011	For support of this property the annex4 Link driver is required	
Debug Mode	Reports information	n to the log and Lua output window
		Modes
	Debug	Reports the data being moved around
	Trace	Reports the flow of the driver
	Info	Reports basic pieces of information
	Warning	Reports any small issues that arise
	Error	Reports any large issues that arise
	Fatal	Reports issues that cause the driver to fail



Shade Movement Type	'Move' to control shade movement 'Rotate' to control motor rotation
Shade Address	The address of the shade
Shade Type	The motor type operating the shade
Shade Speed	The speed in rotations per minute
Reverse Operation	Reverse the UI level displayed
Open Travel Time	The time it takes for the shade to go from closed to opened in milliseconds
Close Travel Time	The time it takes for the shade to go from opened to closed in milliseconds
Current Motor Level	The current level of the motor, this is the opposite of what is shown in Control4. A motor level of 30 is displayed as 70 in Control4.
Current UI Level	The current level that Control4 is displaying

#### **ACTIONS:**

Action Name	Description	
Stop	Stops the shade	
Jog	Jogs the shade open	
Open	Opens the shade	
Close	Closes the shade	
Calibrate	Create bindings for paired shades on the serial connection	
Identify	Moves all other shades to 'Open' and sets this shade to '50'	
	This allows a dealer to quickly identify a shade	
Get Shade	Forces the driver to retrieve the shade information to update	
Info	properties	
Update Now	Updates the driver to the latest version	

#### **CONNETIONS:**

Control Name	Connection Type	Description
Automate Pulse Hub	automate_shade	The communication binding that lets the shade relay commands to the hub driver
Open Button Link	BUTTON_LINK	Click to open, push to start opening, release to stop
Close Button Link	BUTTON_LINK	Click to close, push to start closing, release to stop
Toggle Button Link	BUTTON_LINK	Click to toggle, push to start the toggle, release to stop
Stop Button Link	BUTTON_LINK	Click to stop

# **FOR THE HUB:**

#### **SUPPORTED FEATURES:**

- Simple installation of the hub driver by connecting the network connection;
- Automatically calculates the travel time of the motors accurate to within 50ms;

#### PROPERTIES:

Property	Description	
Auto Update	Enables or disables real time updates of the driver	
	For support of this property the annex4 Link driver is required	
Driver Version	The current version of the driver	
Server Version	The server version of the	driver.
	For support of this property the annex4 Link driver is required.	
Debug Mode	Reports information to the log and Lua output window  Modes	
	Debug	Reports the data being moved around
	Trace	Reports the flow of the driver
	Info	Reports important pieces of information
	Warning	Reports any small issues that arise
	Error	Reports any large issues that arise
	Fatal	Reports issues that cause the driver to fail





Serial Number	The serial number of the hub
MAC Address	The mac address of the hub
Detected Shades	Lists the addresses of all shades discovered on the hub
Terminal	Allows the dealer to manually send commands to the automate hub.
	Commands should be formatted with a starting "!" and an ending ";"
	Responses will show in the property shortly after the command is sent

#### **ACTIONS:**

7101101101	
Action Name	Description
Retrieve	Create bindings for paired shades on the serial
Shades	connection
Clear Shades	Clear the bindings created for shades on the serial
	connection
Close All	Closes all shades
Open All	Opens all shades
Calibrate All	Informs each motor endpoint to calibrate its motor travel
	times
Update Now	Updates the driver to the latest version


#### **CONNETIONS:**

00:::::::::::::::::::::::::::::::::::::		
Control Name	Connection Type	Description
<room>:<shade>:<address></address></shade></room>	AUTOMATE_SHADE	The communication binding for a shade endpoint driver
Link Reveal	LINK_REVEAL	This connection is used for annex4's notification and display type devices. By using this binding, you can get notifications on display type devices with minimal programming.

#### **COMMOMS MISTAKES:**

- 1. Entering the wrong IP address in the "IP Address" configuration line.
  - If you're failing to discover devices double check this!

#### CONTROL4 SYSTEM CONNETION:

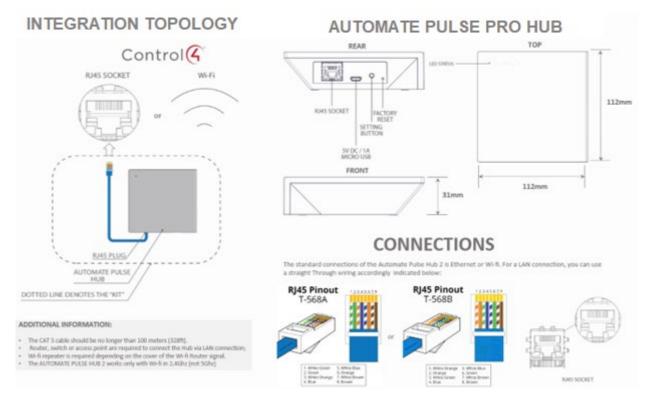





#### FREQUENTLY ASKED QUESTIONS

#### Q. No Pulse PRO Hub detected.

A. Make sure that your Automate Pulse PRO is connected to the correct network and get an IP Address available and still communicating with the network using the Automate Shades App.

#### Q. Shade limits are not set properly.

A. Calibrate shade limits with your Rollease Acmeda remote before setting the appropriate open and close time within CONTROL4 SYSTEM.

#### Q. Shade is not moving at all.

A. Make sure the selected Pulse PRO Hub is the correct Pulse PRO Hub for the shade to be controlled. Confirm the correct bindings are set in the CONTROL4 System connections tab between the Pulse PRO Hub and Shade drivers.

#### Q. I have multiple Pulse PRO Hub's, what do I do?

A. Load two Automate Pulse PRO Hub drivers. After selecting "Retrieve Hubs" located in the driver actions tab, you will see different Automate Pulse PRO Hubs - select the desired one.

#### Q. I don't see any shade bindings in the Pulse PRO Hub driver?

A. Select "Retrieve Shades" located in the driver actions tab.

#### Q. How do I scan for available Automate Pulse PRO Hubs?

A. Once the Automate Pulse PRO Hub is properly connected via the Ethernet cable or Wireless network, navigate to the Automate Pulse Hub Properties page within Composer. Select "Retrieve Hubs" located in the driver actions tab.

#### Q. We get unexpected responses from the CONTROL4 system, or "?" symbols

A. Ensure that all connections using the ethernet port or Wi-Fi are working properly. The missed connection has been known to yield unwanted or unexpected results.

#### **SUPPORT RESOUCES:**

For further assistance, contact your retailer, visit our website at <a href="www.rolleaseacmeda.com">www.rolleaseacmeda.com</a>.

