

# Automate Motor Programming Guide

## 1. ASSEMBLY

Please refer to separate Rollease Acmeda System Assembly Manual for full assembly instructions relevant to the hardware system being used.

## 2. BATTERY MANAGEMENT

For battery motors; Prevent discharging the battery completely for extended periods, recharge as soon as the battery is discharged

## CHARGING NOTES

Before first use please charge motor for 6 hours, using the recommended AC charger

**!** During operation, if battery is low, the motor will beep 10 times to prompt the user it needs charging.

## 3. PRODUCT RANGE

The Quick Start Programming Guide is universal for all Automate Motors including:




Internal Tubular



Large Tubular



0.6 Cord Lift

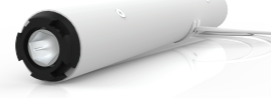

0.8 Cord Lift



Curtain



Tilt Motor

**!** Note: Curtain motor does not Jog but instead LED flashes

## INSTALLER BEST PRACTICE AND TIPS

### SLEEP MODE

If pre-programmed: before shipping the motor ensure the motor is put into sleep mode so it doesn't activate during transit.

### LOCK REMOTE

Prevent users accidentally changing the limit; ensure the remote is locked as your last step of programming.

### ZONE / GROUPS

Ask the customer the day before to think how shades will be zoned on the remote. This may save an extra call out

### SETTLE FABRIC

Run the fabric up and down several times to ensure fabric has settled to some extent and re adjust the limits if needed

### CHARGE 100%

For battery motors ensure the motor is fully charged as per instructions.

### INSTALLERS REMOTE

Use a spare remote to individually program each shade. Then use that remote to group rooms as per the user's needs. If you go back and service the installation later then, that same remote can be used to check the individual shades.


## DISPOSAL AND RECYCLING




Do not dispose of in general waste.




## P1 LOCATIONS

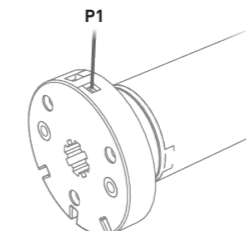


Internal Tubular

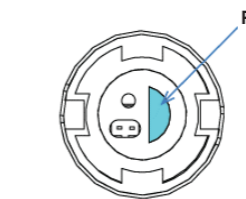

 
0.6 Cord Lift

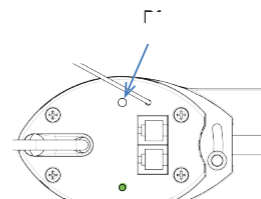


Curtain

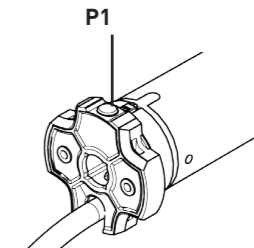 

Large Tubular

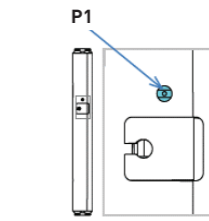 

 0.8 Cord Lift

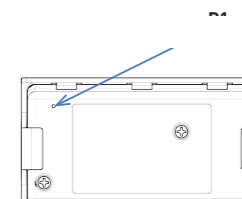

Tilt Motor

## SAFETY

**WARNING: Important safety instructions to be read before installation and use.**

Incorrect installation or use can lead to serious injury and will void manufacturer's liability and warranty. It is important for the safety of persons to follow the enclosed instructions. *Save these instructions for future reference.*

- Do not expose to water, moisture, humid and damp environments or extreme temperatures.
- Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, should not be allowed to use this product.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably qualified installer.
- Follow installation instructions
- For use with motorized shading devices.
- Keep away from children.
- Frequently inspect for improper operation. Do not use if repair or adjustment is necessary.
- Keep clear when in operation.
- Replace battery with correctly specified type.




# INSTALLER

## QUICK START PROGRAMMING


This setup wizard should be used for new installation or factory reset motors only. Individual steps may not work if you haven't followed the wizard from the beginning.

### STEP 1 ON REMOTE

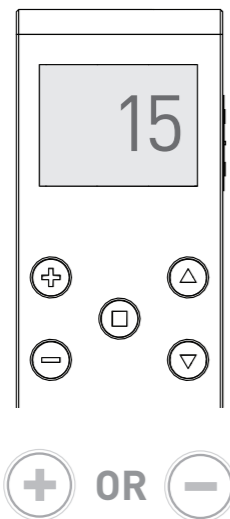

Press + or - buttons to select the channel that needs to be programmed

### STEP 2 ON REMOTE

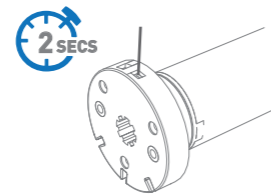 


\* Internal Tubular pictured above. Refer to "P1 Locations" for specific devices

Press the **P1** button on the motor for **2 Seconds** until the motor responds as below



Within 4 seconds hold the stop button on the remote for 3 seconds. The motor will respond.


### STEP 3 CHECK DIRECTION

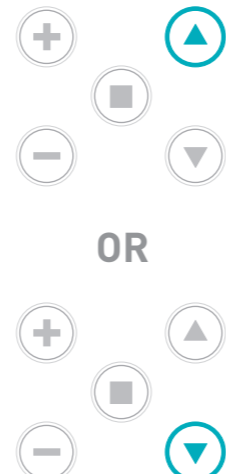 

OR

Press up or down to check the motor direction. If correct skip to step 5

### STEP 4 CHANGE DIRECTION

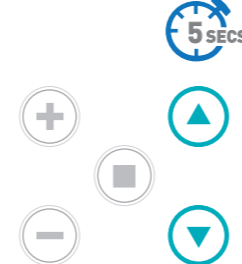 

If the shade direction needs to be reversed; press and hold the **up & down arrow together for 5 seconds** until the motor Jogs




Reversing motor direction using this method is only possible during initial set-up.

### STEP 5 SET UPPER LIMIT



Move shade to desired top limit by pressing the **up arrow** repeatedly. Then press and hold **up & stop together for 5 sec** to save limit.

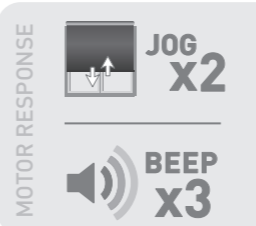


Tap the arrow several times or hold down if needed; press arrow to stop

### STEP 6 SET BOTTOM LIMIT




Move shade to desired bottom limit by pressing the **down arrow** repeatedly. Then press & hold **down & stop together for 5 sec** to save limit.

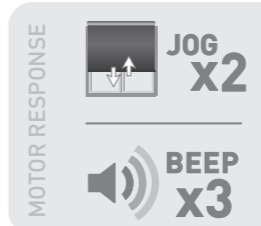

Tap the arrow several times or hold down if needed; press arrow to stop

### STEP 7 SAVE YOUR LIMIT

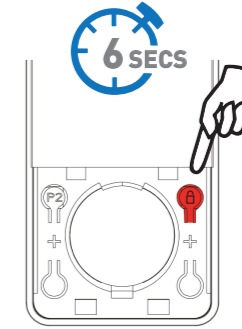


Repeat steps 1-6 for all motors. Once complete **Press and hold the Lock button for 6 seconds** while looking at the screen L will appear on the screen when locked




### FACTORY RESET MOTOR RESET PROCEDURE

To reset all settings in the motor press and hold the **P1 Button for 14 seconds**, you should see **4 independent jogs** followed by **4x Beeps** at the end.

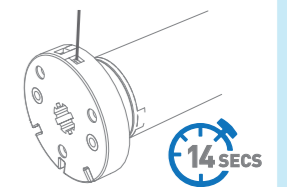

\* Internal Tubular pictured above. Refer to "P1 Locations" for specific devices

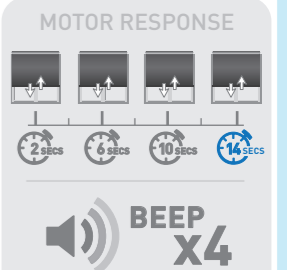




# USER GUIDE

## QUICK START GUIDE

 
### BUTTON OVERVIEW

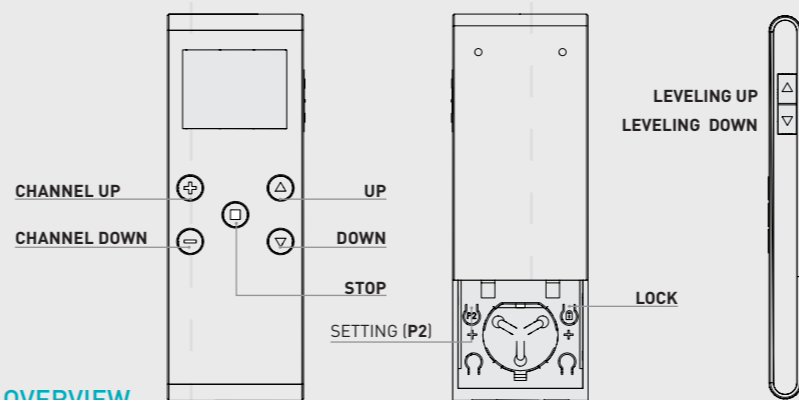

### SELECTING A CHANNEL

Note: If no button is pressed within 4 seconds, the channel selection will automatically be confirmed
 
#### STEP 1

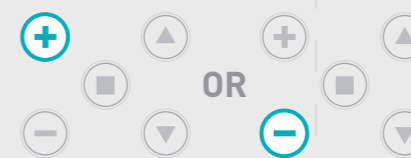

Press the + or - buttons to select the desired channel




#### STEP 2 READY FOR CONTROL

 Now while the channel is active follow the control instructions.


### WALL MOUNTING

Use supplied fasteners and anchors to attach the base to wall.

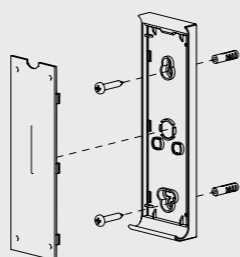


Replace cover by pressing snap latches into place.

### REPLACE BATTERY

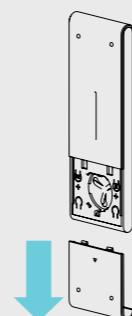 

 
Remove cover from remote press gently in and down to disengage cover.

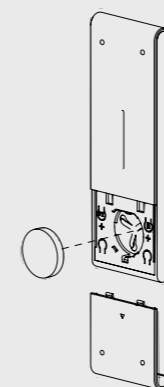


Install battery with positive (+) side facing up

### CONTROLLING A SHADE

 CONTROL SHADE UP OR DOWN

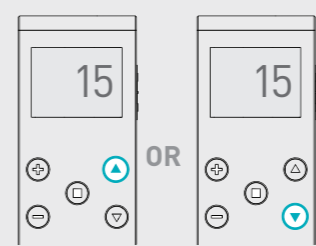

 While the channel is displayed press up or down to move shade accordingly



#### LEVELLING CONTROL

While looking at the LCD use the up and down buttons on the side of the remote for precision levelling control.

When the desired level is reached release finger and the shade will move to that position

 
#### STOPPING THE SHADE



Press the stop button to stop shade at any point

### GROUP CONTROL


Channel "0" is pre-set to control ALL shades paired to your Multi-channel remote.

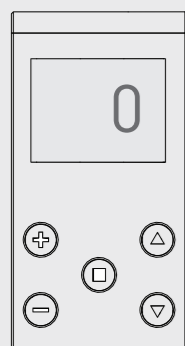

### DISABLE LIMIT SETTING

This mode is intended to be used after all shade programming is completed. User Mode will prevent accidental or unintended changing of limits.

 To switch modes hold right LOCK button for 6 seconds

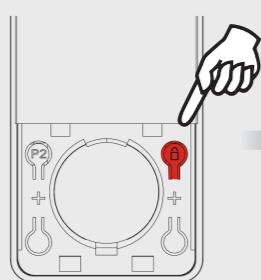


Pressing the lock button for 6 second will toggle between locked and unlocked The Screen will show L or U.

For 15 CH

For 1 CH




 
LCD displays "L" when locked  
LCD displays "U" when unlocked

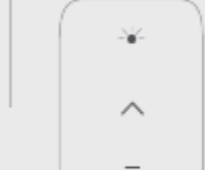

LED solid on when locked  
LED blinking when unlocked

### SET A FAVORITE POSITION

  Move shade to desired position by pressing UP or DOWN on the remote.

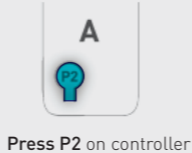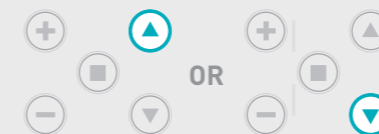

MOTOR RESPONSE  
JOG X1  
BEEP X1




MOTOR RESPONSE  
JOG X1  
BEEP X1



MOTOR RESPONSE  
JOG X2  
BEEP X3

### HIDE UNUSED CHANNELS

 Your multi channel remote can be configured to have anywhere between 1 or 15 visible channels. Inactive channels will not be visible when scrolling through the CH selection.

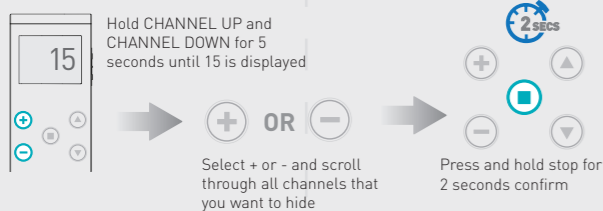


### CREATE CUSTOM GROUPS


It is possible to copy one channel to another channel to create custom groups

#### STEP 1.

 
EXISTING REMOTE Select the channel you want to transfer



Press P2 Button on existing remote.

 

 Press P2 Button again on existing remote.

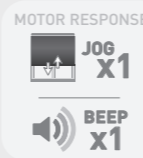


Next step to be completed within 4 seconds of Step 1


#### STEP 2.
 
#### NEW REMOTE

Select the channel you want to transfer too



Press P2 Button on new remote.

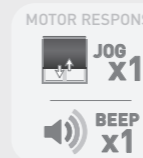 

## ADVANCED PROGRAMMING

# USER GUIDE

