# AUTOMATE Li-ion ARC TUBULAR MOTOR





















433 MHZ BI-DIRECTIONAL

ELECTRONIC LIMIT

SELECTABL RPM

POSITION

LEVEL CONTROL

WIREFREE

SOLAR POWERED

AUTOMATE | Li-ion ARC motors offer a wirefree rechargeable easy to use and program solution to suit a large range of applications, torques and speeds.

The Leveling Control feature allows for precise positioning of multiple shades ensuring perfect alignment.

Additionally, a favorite position can be pre-set and recalled at any time.

#### **FEATURES:**

- Electronic Limits
- 433 MHz Bi-Directional RF Communication
- Leveling Control
- 3 x Selectable Rpm
- Favorite Position
- Roller & Tilt Modes.



# **NOTES**

# **CONTENTS**

1	ASSEMBLY	5
2	WIRING	6
2.1	Charging options	6
3	P1 BUTTON FUNCTIONS	7
4	INTIAL SET-UP	8
4.1	Pair motor with controller	8
4.2	Check motor direction	8
4.3	Set limits	9
5	ADJUSTING LIMITS	10
5.1	Adjust upper limit	10
5.2	Adjust lower limit	10
6	ADDING OR REMOVING CONTROLLERS AND CHANNELS	11
6.1	Using motor P1 button	11
6.2	Using a pre-existing controller	11
7	FAVORITE POSITIONING	12
7.1	Set a favorite position	12
7.2	Send shade to favorite position	12
7.3	Delete favorite position	12
8		
	ADJUSTING MOTOR SPEED	13
8.1	ADJUSTING MOTOR SPEED  Increase or decrease motor speed	<b>13</b>
8.1 <b>9</b>		
	Increase or decrease motor speed	13

TROUBLESHOOTING


15

### **SAFTEY INSTRUCTIONS**

# WARNING: Important safety instructions to be read before installation.

Incorrect installation can lead to serious injury and will void manufacturer's liability and warranty.







#### CAUTION

- Do not expose to moisture or extreme temperatures.
- Do not allow children to play with this device.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably qualified installer.
- For use within tubular blinds.
- Ensure correct crown and drive adaptors are used for the intended system.
- Keep antenna straight and clear from metal objects
- Do not cut the antenna.
- Use only Rollease Acmeda hardware.
- Before installation, remove any unnecessary cords and disable any equipment not needed for powered operation.
- Ensure torque and operating time is compatible with end application.
- Do not expose the motor to water or install in humid or damp environments.
- Motor is to be installed in horizontal application only.
- Do not drill into motor body.
- The routing of cable through walls shall be protected by isolating bushes or grommets.
- Ensure power cable and aerial is clear and protected from moving parts.
- If cable or power connector is damaged do not use.

#### Important safety instructions to be read prior to operation.

- It is important for the safety of persons to follow the enclosed instructions. Save these instructions for future reference.
- Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge should not be allowed to use this product.
- Keep remote controls away from children.
- Frequently inspect for improper operation. Do not use if repair or adjustment is necessary.
- Keep motor away from acid and alkali.
- Do not force the motor drive.
- Keep clear when in operation.





Do not dispose of in general waste.

Please recycle batteries and damaged electrical products appropriately.




# **ASSEMBLY**

Please refer to Rollease Acmeda System Assembly Manual for full assembly instructions relevant to the hardware system being used.

**Step 1.** Cut roller tube to required length.




**Step 2.** Ensure roller tube is clean and free from burrs.

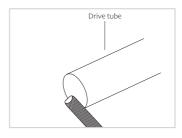


**Step 3.** Fit required crown, drive and bracket adapters.

Tube must be close fitting with chosen crown and drive adapters. Refer to Rollease Acmeda System Assembly Manual for recommended crown, drive, and bracket adapter kits.

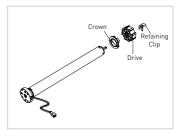


#### **Step 4.** Slide Motor into tube.

Insert by aligning keyway in crown and drive wheel to the tube.

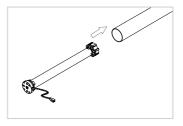

**Step 5.** Mount motorized tube onto brackets.

Refer to Rollease Acmeda System Assembly Manual for recommended crown, drive, and bracket adapter kits.

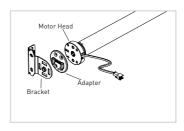


# 2.1 Charging options

This motor has a 12V built in Li-ion battery pack with integrated charge management.


Max power input for recharging: 12.6V / 1000mAh.

- Before first use please charge motor for 6 hours. Using the reccomended AC charger.
- During operation, if voltage drops to less than 10V, the motor will beep 10 times to prompt it needs to be charged.
- Motor will stop running when the voltage is lower than 7V and it will resume again when the voltage is greater than 7.5V.

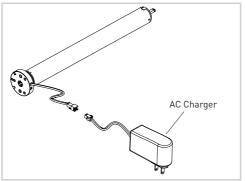

ITEM NO.:

- # MTDCB-CHARGE-US
- # MTDCB-CHARGE-AU
- # MTDCB-CHARGE-EU

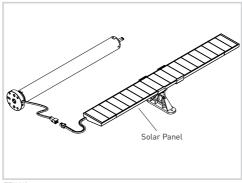

ITEM NO.:

#MTSOLPAN-B




Ensure cable is kept clear of fabric.

Ensure antenna is kept straight and away from metal objects.


# 3 P1 BUTTON FUNCTIONS

P1 Press	Condition	Function Achieved	Visual Feedback	Audible Feedback	Function Described
	If limit is NOT set	None	No Action	None	No Action
Short Press	If limits are set	Operational control of motor, run to limit. Stop if running	Motor runs	None	Operational control of motor after pairing and limit setting is completed first time
	If motor is in "Sleep Mode" & limits are set	Wake and control	Motor wakes and runs in a direction	None	Motor is restored from Sleep Mode and RF control is active

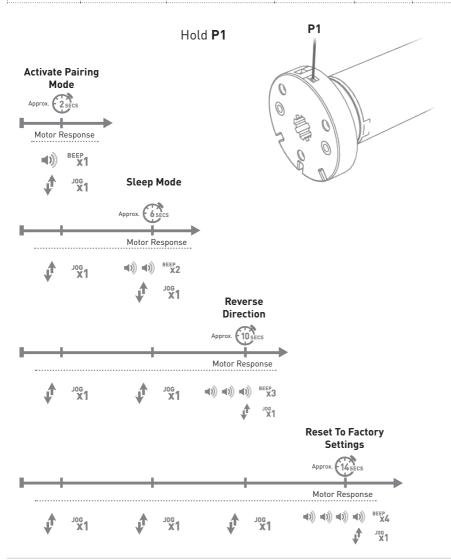

#### 4.1 Pair motor with controller

Select channel on controller.



Hold **P1** button on motor head.

 $\label{eq:hold} \mbox{Hold $\textbf{STOP}$ on controller.}$ 





Consult user manual for your controller for information on selecting channel.







Motor Response











Motor is now in step mode and ready for setting limits

#### 4.2 Check motor direction

To check travel direction of shade, press **UP** or **DOWN** on controller

To reverse shade direction, hold both **UP** and **DOWN** 







Quick Press = Step

**Long Press** = Continuous Travel

Motor Response









Damage to shade may occur when operating motor prior to setting limits. Attention should be given.



**IMPORTANT** 

Reversing motor direction using this method is only possible during initial set-up.

### **Set limits**

To save upper limit, hold **UP** and **STOP**.



Move shade to the desired highest or lowest position by pressing the UP or DOWN buttons on controller.





To save lower limit, hold **DOWN** and **STOP**.





Cycle shade up and down prior to setting limits to settle fabric

















After setting limits, motor will automatically exit from initial set-up mode.



Initial set-up is now complete

# 5.1 Adjust upper limit

Hold **UP** and **STOP** on controller.

Move shade to the desired highest position by pressing the **UP** button.

To save upper limit, hold **UP** and **STOP**.











Motor Response



Motor Response



# 5.2 Adjust lower limit

Hold **DOWN** and **STOP** on controller.

Move shade to the desired lowest position by pressing the **DOWN** button.

To save lower limit, hold **DOWN** and **STOP**.











Motor Response



Motor Response



# **6 ADDING OR REMOVING CONTROLLERS AND CHANNELS**

# 6.1 Using motor P1 button



Hold **STOP** on controller to add or remove.



Motor Response

Approx. 2secs Digital BEEP X

Motor Response










# 6.2 Using a pre-existing controller

**A=** Exisiting controller or channel (to keep)

**B=** Controller or channel to add or remove

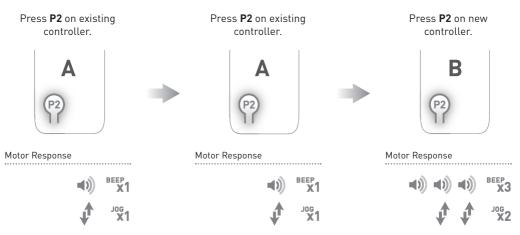



Consult user manual for your controller or sensor.


# **FAVORITE POSITIONING**

# Set a favorite position

Press P2 on controller.

Motor Response

Move shade to the desired position by pressing the **UP** or **DOWN** button on the controller.

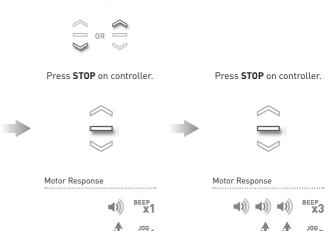

#### 7.2 Send shade to favorite position

Hold STOP on controller.



#### **Delete favorite position** 7.3

Press P2 on controller.



Press **STOP** on controller.

Press STOP on controller.

Motor Response




Motor Response



Motor Response



# 8.1 Increase or decrease motor speed

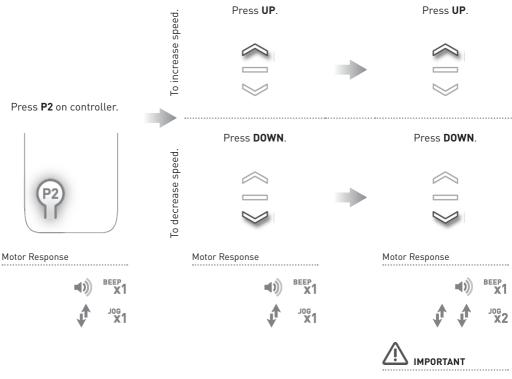

If motor does not react to speed adjustment, the maximum or minimum speed has already been reached.

# **TILT & ROLLER MODE**

#### 9.1 Enter tilt mode

Hold **UP** and **DOWN** on controller.



Press STOP.



Motor Response

Approx. 5 SECS



Motor Response







#### 9.2 Enter roller mode (Default)

Hold **UP** and **DOWN** on controller.





Press STOP.



Motor Response







Motor Response











# 10 TROUBLESHOOTING

Problem	Cause	Remedy	
	Battery in motor is depleted	Recharge with compatible AC adaptor and check connection and positioning of PV panel.	
	Insufficient charging from Solar (PV) Panel	Check connection and orientation of PV panel.	
	Transmitter battery is discharged	Replace battery	
	Battery is inserted incorrectly into transmitter	Check battery polarity	
Motor is not responding	Radio interference/shielding	Ensure transmitter is positioned away from metal objects and the aerial on motor or receiver is kept straight and away from metal	
	Receiver distance is too far from transmitter	Move transmitter to a closer position	
	Power failure	Check power supply to motor is connected and active	
	Incorrect wiring	Check that wiring is connected correctly (refer to motor instructions)	
Motor beeps 10 times when in use	Battery voltage is low / PV (solar) panel issue	Recharge with AC adaptor or check connection and positioning of PV pane	
		Always reserve an individual channel for programming functions	
Cannot program a single Motor (multiple motors respond)	Multiple motors are paired to the same channel.	SYSTEM BEST PRACTICE - Provide an extra 15 channel remote in your multi motor projects, that provides individual control for each motor for programming purposes	
		Place all other motors into sleep mode (ref to <b>P1</b> function overview - section 3)	

#### ROLLEASE ACMEDA AUSTRALIA

110 Northcorp Boulevard, Broadmeadows VIC 3047 T +61 3 9355 0100 | F +61 3 9355 0110 Western Australia Branch Unit 1, 41 Mulgul Road, Malaga WA 6090 T +61 8 9248 5571 | F +61 8 9248 5572 Queensland Branch Unit 2/62 Borthwick Avenue, Murarrie QLD 4172

# ROLLEASE ACMEDA USA

200 Harvard Avenue Stamford, CT 06902 6320

T +1 203 964 1573 | F +1 203 964 0513

# ROLLEASE ACMEDA EUROPE

Via Conca Del Naviglio 18, Milan (Lombardia) Italy

T +39 02 8982 7317 | F +39 02 8982 7317

info@rolleaseacmeda.com rolleaseacmeda.com

