


MOTOR PROGRAMMING INSTRUCTIONS

Li-ion & DC Motors



SOFT STOP

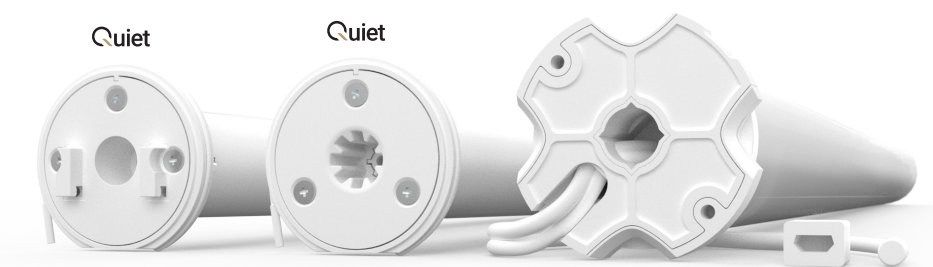

ELECTRONIC
LIMIT



SELECTABLE
SPEED



433 MHZ
BI-DIRECTIONAL



FAVORITE
POSITION



BATTERY CHECK



SOLAR OPTION



LEVEL CONTROL



BATTERY
POWERED



USB CHARGE
(Only for Li-ion Motor)

ARC

Applicable Motor Series	Minimum Tube Diameter	Rated Torque	Maximum Operating Time
MT01-1225 Series MT01-1325 Series	Ø25 mm	0.7 Nm or 1.1 Nm	6min, 10min or 12min
MT01-1328 Series MT01-1228 Series MTDCBRFQ28 Series MTDCRFQ28 Series	Ø28 mm	2 Nm	
MTDCRF35 Series MTDCBRF35 Series MT01-1335 Series MT01-1235 Series	Ø35 mm	3 Nm or 6 Nm	
MTDCRFQ45 Series MT01-1245 Series MTDCRF45 Series MTDCBRF45 Series MT01-1345 Series	Ø45 mm	3 Nm, 6Nm, 10Nm or 13Nm	

Note: The series listed in the table above represent families of motors with multiple part numbers. For specific part numbers, torque ratings, motor diameter, operating time and other motor-specific values, please refer to the label on the motor.



CONTENTS

1	ASSEMBLY	4	9	TILT & ROLLER MODE	12
2	RETROFIT INSTALLATION	5	9.1	Toggle motor to Tilt Mode	12
3	CHARGING	5	9.2	Toggle Motor to Roller Mode	12
4	P1 BUTTON FUNCTIONS	6	10	ADJUSTING SPEED	13
4.1	Motor state test	6	10.1	Increase Motor Speed	13
4.2	Motor configuration options	6	10.2	Decrease Motor Speed	13
5	INITIAL SET UP	7	11	SOFT STOP CONFIGURATION	14
5.1	Pair motor with controller	7	11.1	Turn Soft Stop OFF	14
5.2	Check motor direction	7	11.2	Turn Soft Stop ON	14
5.3	Set Limits	8	12	BATTERY CHECK FUNCTION	15
6	ADJUSTING LIMITS	9	12.1	Send Shade to battery charge level	15
6.1	Adjust upper limit	9	13	CHARGING LED	15
6.2	Adjust lower limit	9	13.1	Turn Charging LED ON/OFF	15
7	CONTROLLERS AND CHANNELS	10	14	SLEEP MODE	16
7.1	Using P2 Button on existing controller to add a new controller or channel	10	15	TROUBLE SHOOTING	16
7.2	Using a pre-existing controller to add or delete a controller or channel	10			
8	FAVORITE POSITIONING	11			
8.1	Set a favorite position	11			
8.2	Send shade to favorite position	11			
8.3	Delete favorite position	11			

SAFETY INSTRUCTIONS

WARNING: Important safety instructions to be read before installation.

Incorrect installation can lead to serious injury and will void manufacturer's liability and warranty.

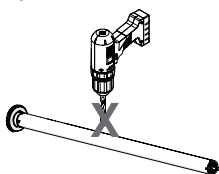

WARNING: Important safety instructions to be read before installation and use.

Incorrect installation or use can lead to serious injury and will void manufacturer's liability and warranty.
It is important for the safety of persons to follow the enclosed instructions. Save these instructions for future reference.

- Read and follow all installation and safety instructions.
- This manual is also available on the website.
- Do not expose to water, moisture, humid and damp environments or extreme temperatures.
- Use or modification outside the scope of this instruction manual will void warranty.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be performed by children without supervision.
- Do not allow children to play with fixed controls. Keep appliance and remote controls away from children.
- Assembly, installation and programming must be performed by a suitably qualified installer.
- For use with motorized shading devices.
- Frequently inspect the installation for improper operation, signs of wear, imbalance or damage to cables or springs. Do not use if repair or adjustment is necessary.
- The appliance must be disconnected from its power source during cleaning, maintenance or when replacing parts. Maintenance and parts replacement should be performed by a suitably qualified installer/technician.
- The A-weighted emission sound pressure level of the appliance is less than or equal to 70dB(A).
- The appliance is for indoor use only.
- Disconnect the appliance from power or switch off automatic controls when maintenance, such as window cleaning, is being carried out in the vicinity.
- The appliance must be supplied only the safe, extra-low voltage corresponding to the marking on the appliance.
- Keep clear of the appliance when in operation.
- There are no user serviceable parts or batteries inside the appliance.
- Remote batteries should be replaced with the correctly specified type only.
- The mass and dimensions of the driven part must be compatible with the rated torque and rated operating time of the appliance.
- The driven part must be compatible with rated torque, minimum tube diameter and maximum operating time of the motor.
Refer to the applicable motor series on page 1.
- Fixed controls have to be clearly visible after installation.
- The appliance is intended to be installed at a height of at least 2.5m above the floor or any other accessible level surface.
- Before installing the appliance, remove any unnecessary cords or components and disable any equipment not needed for powered operation.

COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To satisfy FCC / IC RF exposure requirements, a separation distance of 20 cm or more should be maintained

between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.

Les antennes installées doivent être situées de façon à ce que la population ne puisse y être exposée à une distance de moins de 20 cm. Installer les antennes de façon à ce que le personnel ne puisse approcher à 20 cm ou moins de la position centrale de l'antenne.

La FCC des états-unis stipule que cet appareil doit être en tout temps éloigné d'au moins 20 cm des personnes pendant son fonctionnement.











Do not dispose of in general waste. Please recycle batteries and damaged electrical products appropriately.










CAN ICES-3(B)/NMB-3(B)






1 ASSEMBLY

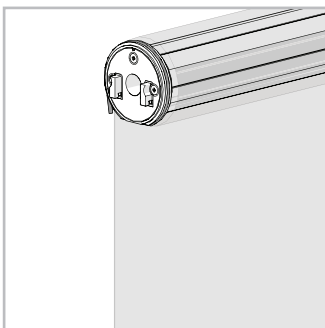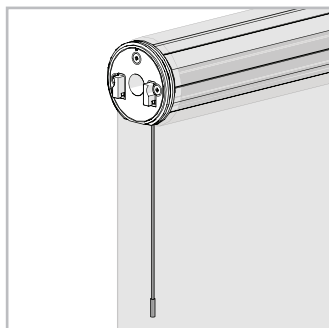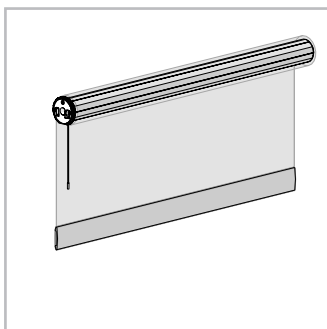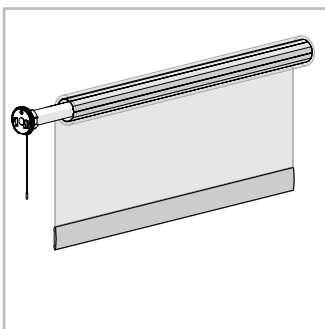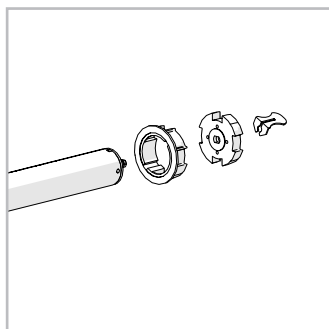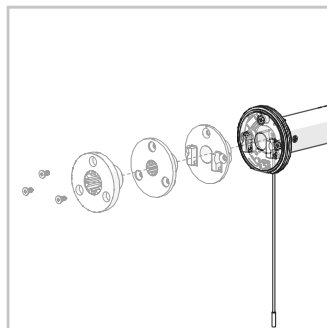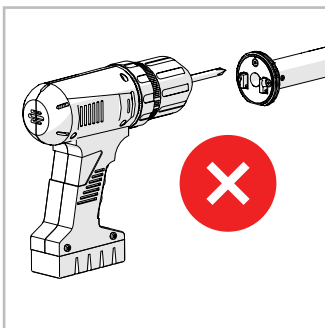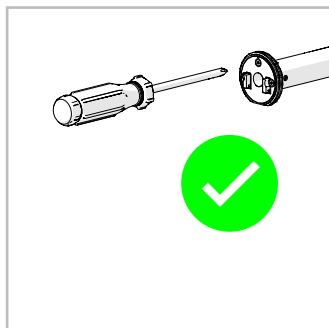

2 RETROFIT INSTALLATION

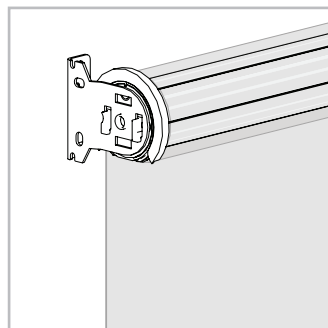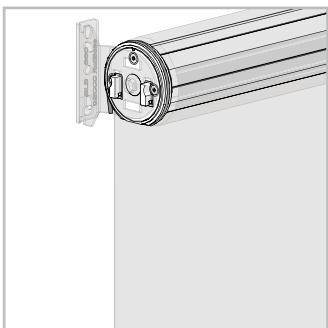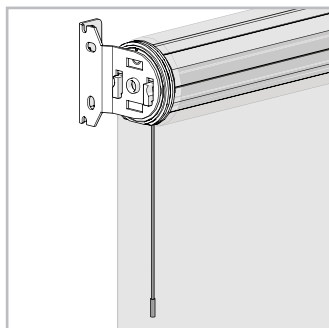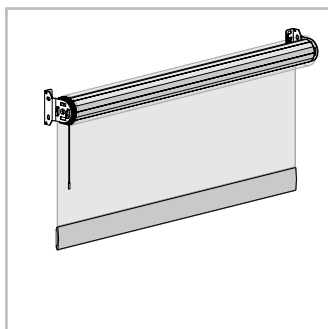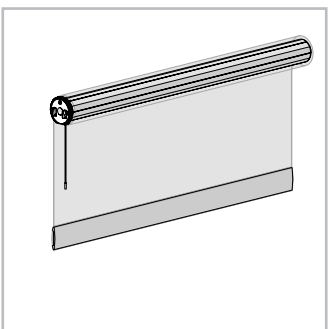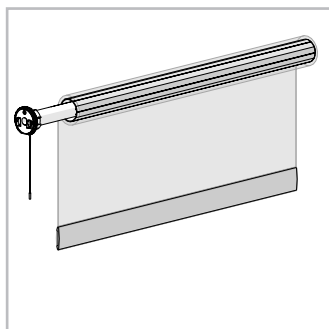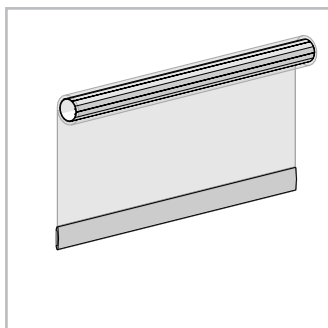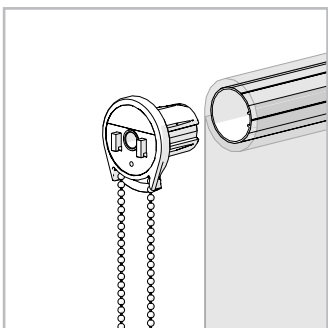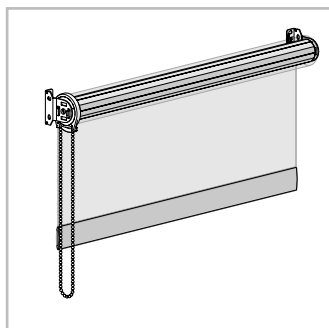

3 CHARGING

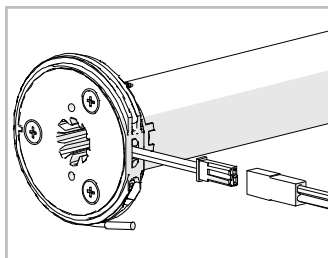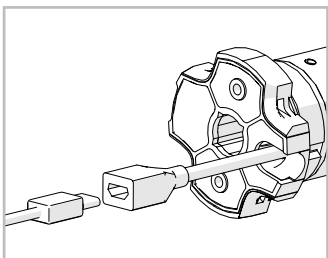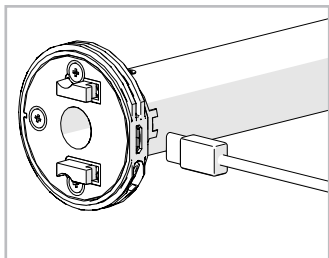

4 P1 BUTTON FUNCTIONS

4.1 Motor state test

This table describes the function of a short **P1** Button press/release (<2 seconds) depending on current motor configuration.

P1 Press	Condition	Function Achieved	Visual Feedback	Audible Feedback	Function Described
Short Press	If limit is NOT set	None	No Action	None	No Action
	If limits are set	Operational control of motor, run to limit. Stop if running	Motor Runs	None	Operational control of motor after pairing and limit setting is completed first time
	If motor is in "Sleep Mode" & limits are set	Wake and control	Motor wakes and runs in a direction	None	Motor is restored from Sleep Mode and RF control is active

4.2 Motor configuration options

The **P1** Button is utilized to administer motor configurations as described below.

Hold **P1** button on motor head.

Activate Pairing Mode




Sleep Mode



Reverse Direction



Reset To Factory Settings

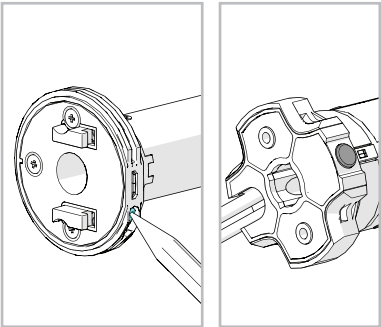

P1 button on motor head.


5 INITIAL SET UP

5.1 Pair motor with controller

Select channel on controller.



Hold **P1** button on motor head.

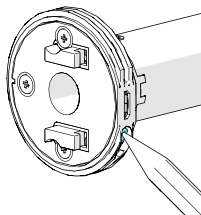

Hold **STOP** on controller.



! IMPORTANT

Consult user manual for your controller for information on selecting channel.

Motor Response




Motor Response



! Motor is now in step mode and ready for setting limits

5.2 Check motor direction

To check travel direction of shade, press **UP** or **DOWN** on controller.

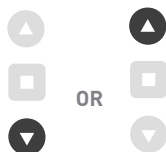

To reverse shade direction, hold both **UP** and **DOWN**.

Until the motor responds.



Quick Press = Step

Long Press = Continuous Travel

! IMPORTANT

Damage to shade may occur when operating motor prior to setting limits. Attention should be given.

Motor Response



! IMPORTANT

Reversing motor direction using this method is only possible during initial set-up

5.3 Set Limits



IMPORTANT

Cycle shade up and down prior to setting limits to settle fabric

Move shade to the desired highest or lowest position by pressing the **UP** or **DOWN** buttons on controller.




To save upper limit, hold **UP** and **STOP**.



Motor Response



Move shade to the desired highest or lowest position by pressing the **UP** or **DOWN** buttons on controller.

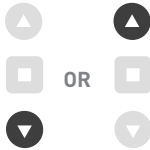

To save lower limit, hold **DOWN** and **STOP**.



Motor Response



IMPORTANT

After setting limits, motor will automatically exit from initial set-up mode.


6 ADJUSTING LIMITS

6.1 Adjust upper limit

Hold **UP** and **STOP** on controller.



Move shade to the desired highest position by pressing the **UP** or **DOWN** button.

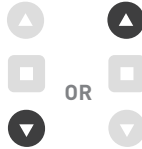

To save upper limit, hold **UP** and **STOP**.



Motor Response



Motor Response




6.2 Adjust lower limit

Hold **DOWN** and **STOP** on controller.



Move shade to the desired lowest position by pressing the **UP** or **DOWN** button.

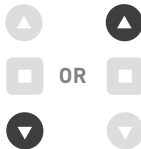

To save lower limit, hold **DOWN** and **STOP**.



Motor Response



Motor Response




7 CONTROLLERS AND CHANNELS

7.1 Using P2 Button on existing controller to add a new controller or channel


A (Controller) = Existing controller, remote or channel that is paired to the motor.

B (Controller) = Controller or channel to add.

Press **P2** on controller **A**.

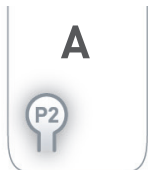

Press **P2** again on controller **A**.

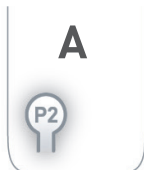

Hold **STOP** on controller **B** to add it.



Motor Response



Motor Response



Motor Response




IMPORTANT Consult user manual for your controller or sensor

7.2 Using a pre-existing controller to add or delete a controller or channel


A (Controller) = Existing controller, remote or channel that is paired to the motor.

B (Controller) = Controller or channel to add or remove.


Press **P2** on controller **A**.

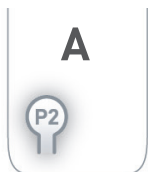

Press **P2** again on controller **A**.

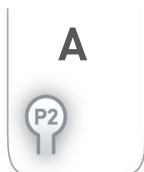

Press **P2** on controller **B** to pair it.

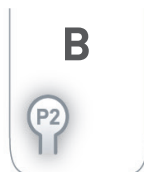

Motor Response



Motor Response



Motor Response




NOTE Repeating this section with an existing Remote (A) and a paired Remote (B) will unpair the Remote (B) from the motor.

8 FAVORITE POSITIONING

8.1 Set a favorite position


Move shade to the desired position by pressing the **UP** or **DOWN** button on the controller.

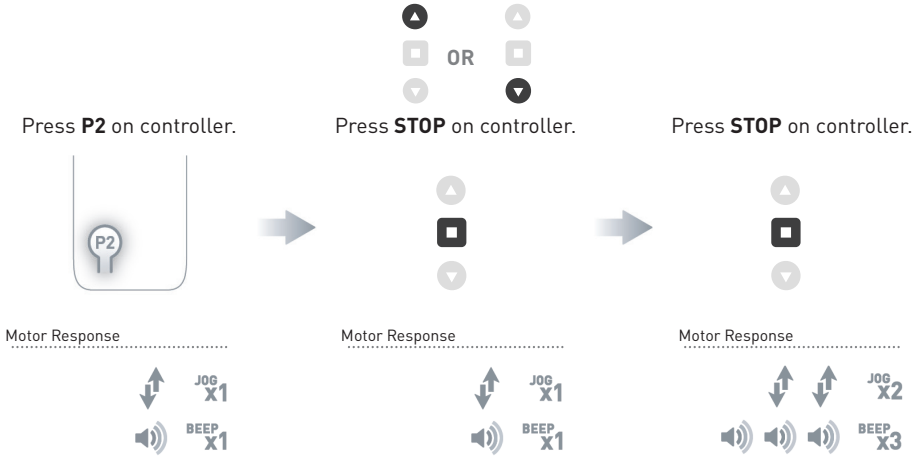

8.2 Send shade to favorite position



8.3 Delete favorite position

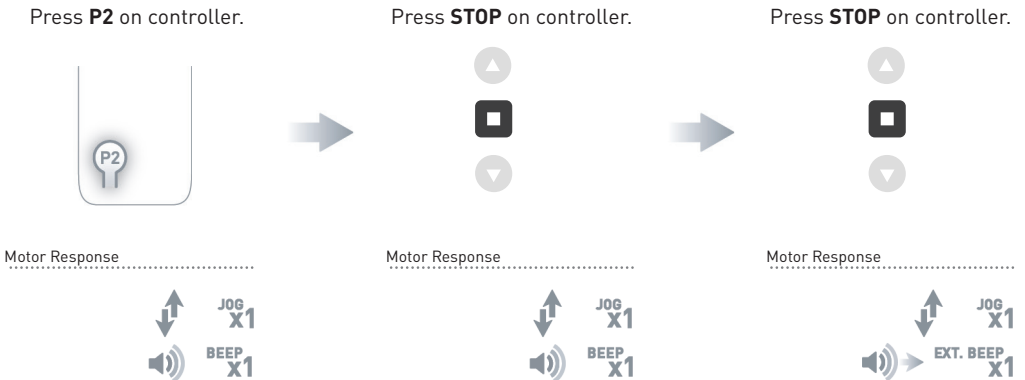

9 TILT & ROLLER MODE



9.1 Toggle motor to Tilt Mode


Default motor mode is Roller after initial Limits have been set, use following steps to change to Roller Mode.

Hold **UP** & **DOWN** on controller.

Press **STOP** on controller.



Motor Response.....
Approx.   JOG X1


Motor Response.....
  JOG X1
 EXT. BEEP X1

9.2 Toggle Motor to Roller Mode

If motor is in Tilt Mode, use following steps to change to Roller Mode.

Hold **UP** & **DOWN** on controller.

Press **STOP** on controller.

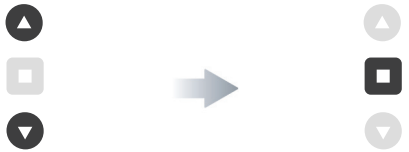

Motor Response.....
Approx.   JOG X1

Motor Response.....
    JOG X2
 BEEP X3


10

ADJUSTING SPEED

10.1

Increase Motor Speed

Default motor mode is the slowest speed.

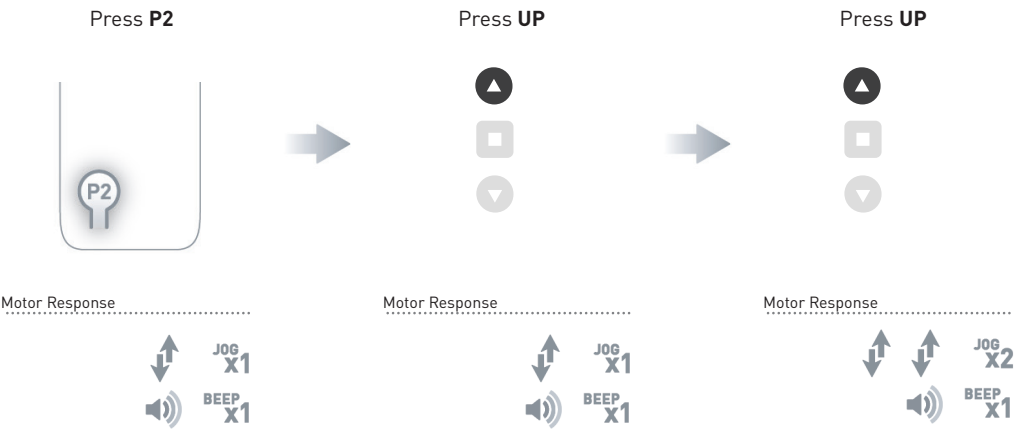

10.2

Decrease Motor Speed




11

SOFT STOP CONFIGURATION

11.1

Turn Soft Stop OFF


Motor must be in slowest speed to turn Soft Stop OFF.

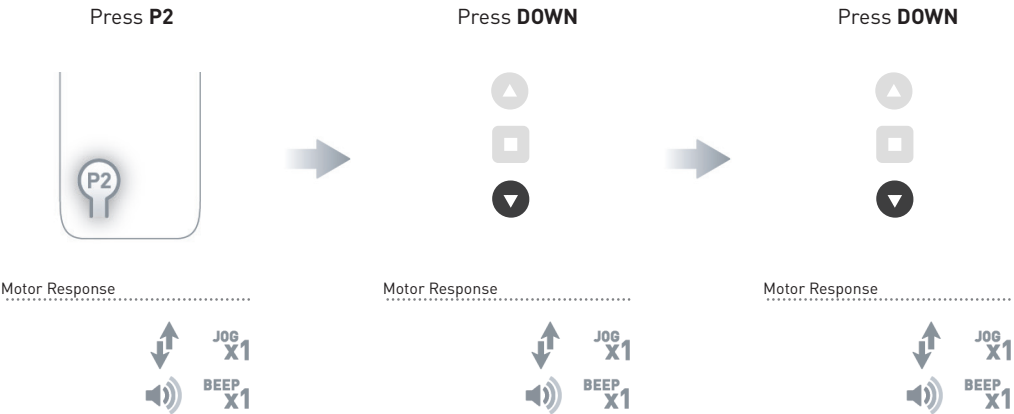

11.2

Turn Soft Stop ON

Motor must be in fastest speed to turn Soft Stop ON.

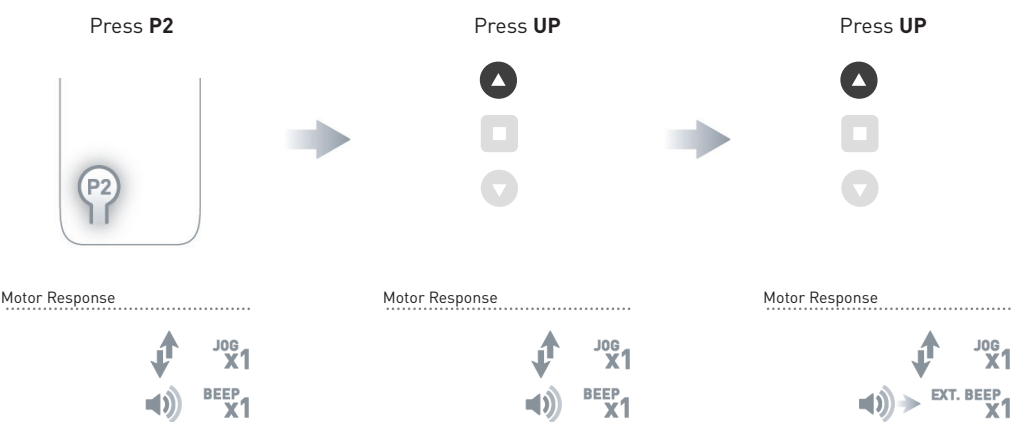

12



BATTERY CHECK FUNCTION

12.1

Send Shade to battery charge level

Shade must be at Upper Limit.

Hold **UP**

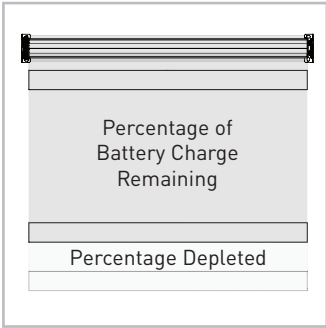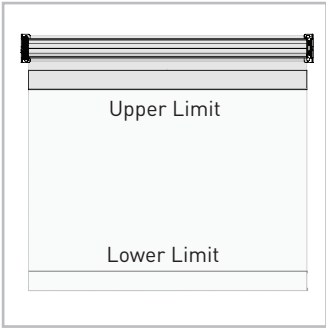

Motor Response

Approx. 

Shade must be at Upper Limit
Hold **UP** for Approx. 5s

Shade moves to percentage of
battery charge remaining

NOTE: This feature is can only be used with a DC motor when it is using a Battery Pack as its power source.

13

CHARGING LED

13.1

Turn Charging LED ON/OFF

Motor must be at Lower Limit.

Hold **DOWN** to toggle off



Hold **DOWN** to toggle on




Motor Response

Approx.  Red LED flashes x3


Motor Response

Approx.  Red LED flashes x3


CHARGING LED STATUS



SOLID GREEN
Motor is fully charged



BLINKING GREEN
Motor is charging. Battery is greater than 50%.



BLINKING GREEN & RED
Motor is charging. Battery is lower than 50%.

14 SLEEP MODE

If multiple motors are grouped on a single channel, Sleep Mode may be used to put all but 1 motor to sleep, allowing programming of just the one motor that remains "Awake". See page 6 for detailed **P1** functions.

Enter Sleep Mode
Sleep mode is utilized to prevent a motor from incorrect configuration during other motor setup.


Hold **P1** button on the motor head

Exit Sleep Mode: Method 1
Exit sleep mode once the shade is ready.

Press and release **P1** button on the motor head

Exit Sleep Mode: Method 2

Remove power and then re-power the motor.

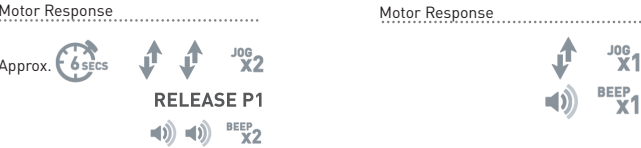

15 TROUBLE SHOOTING

automateshades.com

Problem	Cause	Remedy
Motor is not responding	Battery in motor is depleted	Recharge with a compatible charger
	Insufficient charging from solar PV panel	Check connection and orientation of PV panel
	Transmitter battery is discharged	Replace battery
	Battery is inserted incorrectly into transmitter	Check battery polarity
	Radio interference/shielding	Ensure transmitter is positioned away from metal objects and the aerial on motor or receiver is kept straight and away from metal
	Receiver distance is too far from transmitter	Move transmitter to a closer position
	Charging failure	Check power supply to motor is connected and active
Motor beeps x10 when in use	Battery voltage is low	Recharge with a compatible charger
Cannot program a single motor (multiple motors respond)	Multiple motors are paired to the same channel	Always reserve an individual channel for programming functions. Use Sleep Mode to program individual motors.

ROLLEASE ACMEDA USA 750 East Main Street 7th Floor Stamford, CT 06902, USA T +1 800 552 5100 F +1 203 964 0513	ROLLEASE ACMEDA AUSTRALIA 110 Northcorp Boulevard, Broadmeadows VIC 3047, AUS T +61 3 9355 0100 F +61 3 9355 0110	ROLLEASE ACMEDA NEW ZEALAND 10a Kerwyn Avenue East Tamaki Auckland 2013, New Zealand T: +64 9 271 1131
---	--	---